

INSTALLATION

1. BOX CONTENTS

| | | | |
|---|--|---|--|
|  ● P-3600 Unit |  ● Windshield Mount |  ● SD Card (1G) |  ● DVD |
|  ● AC Power Adapter |  ● Auto Power Adapter (Cigarette lighter Jack) |  ● User Guide | |

NOTE

The product is fitted with SD Card when the product is shipped.

2. How to Mount P-3600



1. To prevent the unit shaking, modify the Windshield Mount.



2. Find a suitable spot on the windshield, firmly place the suction cup against the glass and turn the lever to the closed position.



3. Plug in the auto power adapter.
■ Plug the auto power adapter into the power input port of the device.



4. Plug the auto power adapter into the cigarette lighter socket of the vehicle.



5. Connect the unit to the Windshield Mount.
■ Turn the unit gently until you are satisfied with the viewing angle.



6. Get to your next destination.
Safety - Quickly - Confidently

WARNING

- Improper installation may make the navigation system fall out from the cradle while driving. Please make sure all locks and knobs are turned tight.
- Do not try to install or uninstall the Navigation unit while you are driving.

CAUTION

- Remove the navigation system when you are away from the vehicle to prevent theft.

3. SYSTEM FEATURES



① POWER button(Screen on/off)

② MENU button
Displays the main menu on the screen.
(NAVI, MP3, Picture Viewer, System Setup)

③ 3.5" LCD Touch Panel

④ Headphone Jack

⑤ SD Memory Card Slot


⑥ DC Power Input Jack

⑦ USB Port

⑧ Connects the P-3600 to the Windshield Mount.

4. Accessing the MENU Screen

You can access the MENU Screen anytime by pressing the MENU button on the right of the unit. The MENU Screen provides access to all the primary functions.

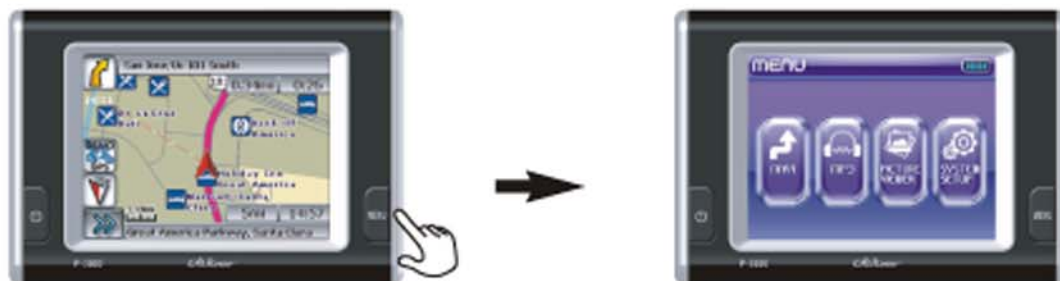

NAVIGATION SYSTEM

5. Before starting Navigation

For your complete satisfaction and finest performance, please review the P-3600 User Guide for complete information on to best operate your CALIBER-NavMate Navigation Software.

6. BY Address/Intersection



After turning on the unit, the warning screen will appear. Read carefully. After then, select the Press to accept icon.



On the start screen, tap main menu icon.




Tap Go To... icon.



On the following screen, tap Address or Intersection icon.



On Address/Intersection window, select the Street Name icon.

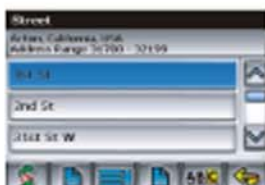

Select the desired address through the list by scrolling using the arrow keys



After selecting a destination, the navigation system calculates the route.



The Route Guidance will start.

7. BY Point of Interest



After turning on the unit, the warning screen will appear. Read carefully. After then, select the Press to accept icon.



On the start screen, tap main menu icon.




Tap Go To... icon.



On the following screen, tap Point of Interest icon.



POI Search Methods window will appear. Select the By Category icon.

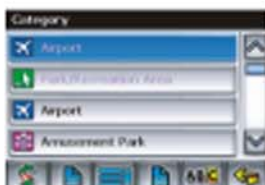

Select the desired POI category type.



Enter the detail POI category.



Select the desired address through the list by scrolling using the arrow keys



After selecting a destination, the navigation system calculates the route.



The Route Guidance will start.

8. BY Address Book



After turning on the unit, the warning screen will appear. Read carefully. After then, select the Press to accept icon.



On the start screen, tap main menu icon.



Tap Go To... icon.



On the following screen, tap Favorites icon.



Tap Address Book icon.



Select the desired address through the list by scrolling using the arrow keys.



After selecting a destination, the navigation system calculates the route.



The Route Guidance will start.

9. BY Previous Destination



Tap Previous Destination.



Select the desired address through the list by scrolling using the arrow keys.



After selecting a destination, the navigation system calculates the route.



The Route Guidance will start.

Additional Functions

10. MP3



Push the MENU button on the unit. Then, tap the MP3 icon on the MENU screen.



The displayed MP3 file on the play list will be played automatically. To Select other MP3 files, tap the 'FILE' icon on the upper right of the screen



Select the desired MP3 file by using the scrolling up and down in the MP3 list.

NOTE On MP3 List window, the icons change the mp3 list per page.



The MP3 screen will return. The selected MP3 file will be played automatically.

11. Picture Viewer



Push the MENU button on the unit. Then, tap the Picture Viewer icon on the MENU screen.



Picture Viewer main window will appear.



For the full screen mode, tap the FULL icon on the bottom of the picture viewer main window.



For the slide show mode, tap the SLIDE icon on the bottom of the picture viewer main window.

NOTE On the slide show mode, the picture slide is converted at 3 seconds intervals.