

StreetPilot® 2730

owner's manual



© Copyright 2005–2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street,
Olathe, Kansas 66062, U.S.A.
Tel. 913/397.8200 or 800/800.1020
Fax 913/397.8282

Garmin (Europe) Ltd.
Unit 5, The Quadrangle,
Abbey Park Industrial Estate,
Romsey, SO51 9DL, U.K.
Tel. 44/0870.8501241
Fax 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road,
Shijr, Taipei County, Taiwan
Tel. 886/2.2642.9199
Fax 886/2.2642.9099

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin®, StreetPilot®, and MapSource® are registered trademarks and City Navigator™ is a trademark of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.

Audible.com® and AudibleReady® are registered trademarks of Audible, Inc. © Audible, Inc. 1997–2005

XM Radio and XM NavTraffic are trademarks of XM Satellite Radio Inc.



PREFACE

Contact Garmin

If you encounter any difficulty while using your Garmin® StreetPilot® 2730, or if you have any questions, in the U.S.A. contact Garmin Product Support by phone at 913/397.8200 or 800/800.1020, Monday–Friday, 8 AM–5 PM Central Time. You can also visit the Garmin Web site at www.garmin.com/support.

In Europe, contact Garmin (Europe) Ltd. at 44/0870.8501241.

Serial Number

Record the serial number (8-digit number located on the back of the unit, under the auto mount cradle) in case your StreetPilot 2730 needs service or you would like to buy additional maps.

Serial Number: _____

Tell us how you like this manual! Fill out the Product Documentation Survey. Go to www.garmin.com/contactUs/ and click **Product Documentation Survey**.

Quick Links

- Finding an address: [page 3](#)
- Viewing the map page: [page 12](#)
- Listening to MP3 files: [page 25](#)
- Listening to an audible book: [page 27](#)
- Turning off the GPS to use indoors: [page 14](#)
- Transferring files: [pages 21–24](#), [page 51](#)
- Adjusting the volume: [page 36](#)
- Adjusting the brightness: [page 42](#)
- Cleaning and storing your unit: [page vi](#)

TABLE OF CONTENTS

Preface	i	Saving Your Current Location	8	Deleting All Saved Routes	18
Contact Garmin	i	Setting a Home Location.....	9	Stopping Your Route	18
Serial Number	i	Finding Saved Places	9	Adding a Detour to a Route	18
Quick Links	i	Editing Saved Places	10	Adding Avoidances.....	19
Caring for Your StreetPilot 2730	vi	Deleting a Saved Place.....	11	Using The Logs.....	20
Find It and Go!	1	Viewing the Map and Using the		Adjusting the Track Log	20
Finding a Restaurant.....	1	Tools	12	Using the Mileage Logs	20
Following Your Route	2	Viewing the Map Page	12	Loading Files on Your 2730	21
Where To?	3	Trip Computer	13	Step 1: Load the USB Drivers	21
Finding an Address	3	Turn List	13	Step 2: Connect AC Power	21
Using the Where To? Menu.....	4	GPS Info Page	14	Step 3: Connect the USB Cable	21
Finding a Place Using the Map	5	Weather, Stocks, and Traffic	14	Step 4: Select USB Mass Storage	22
Understanding the Information Page ..	6	Creating and Editing Routes ...	15	Step 5: Transfer Files	22
Finding Recently Found Places	6	Creating a New Saved Route	15	Step 6: Eject and Unplug the USB	
Finding Places in a Different Area.....	7	Editing a Saved Route	16	Cable	23
Narrowing Your Search	7	Adding Midpoints (Stops) to Your		Information about the Drive.....	24
My Locations	8	Route	17	Listening to Music and Audible	
Saving Places You Find	8	Saving the Active Route.....	18	Books	25
		Navigating a Saved Route	18	Playing MP3 Files	25
		Recalculating the Route.....	18	Listening to Audible Books.....	27

Listening to Audio Over the Vehicle's Speakers	32	Appendix	43
FM Transmitter Tips	33	Using the Remote Control.....	43
Traffic Information	34	Looking at the StreetPilot 2730	44
Connecting the GXM 30 to Your StreetPilot	34	Using the 2730 Unit Keys	45
Viewing Traffic Events.....	34	Installing the 2730 in Your Vehicle	45
Changing the Traffic Settings.....	35	Custom POIs (Points of Interest)	47
Adding an XM Traffic Subscription....	35	Customizing the Map Data Fields	48
Customizing the StreetPilot 2730	36	Technical Specifications	49
Adjusting the Volume	36	Changing the Fuse.....	49
Customizing the General Settings	36	Updating the Software and Map Data	50
Changing the Map Settings.....	39	Using a Remote GPS Antenna	50
Changing the Navigation Settings.....	40	FCC Compliance.....	51
Adjusting the Traffic Settings	41	Software License Agreement	51
Changing the Screen Settings	41	Declaration of Conformity	51
Viewing Unit Information (About)	41	USB Interface Troubleshooting	52
Restoring the Settings.....	42	2730 Troubleshooting	54
		Limited Warranty	55
		Index	56


 **Warning**

This manual uses the term **Warning** to indicate a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

When installing the unit in a vehicle, place the unit securely so that it does not interfere with vehicle operating controls or obstruct the driver's view of the road (see diagram).

Do not mount where driver's field of vision is blocked.

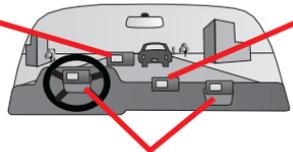

Do not place unsecured on the vehicle dash.

Do not mount in front of an airbag field of deployment.

When navigating, carefully compare information displayed on the unit to all available navigation sources, including information from street signs, visual sightings, and maps. For safety, always resolve any discrepancies or questions before continuing navigation.

Always operate the vehicle in a safe manner. Do not become distracted by the unit while driving, and always be fully aware of all driving conditions. Minimize the amount of time spent viewing the screen of the unit while driving and use voice prompts when possible.

Do not enter destinations, change settings, or access any functions requiring prolonged use of the unit's controls while driving. Pull over in a safe and legal manner before attempting such operations.

WARNING: This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This Notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, refer to our Web site at www.garmin.com/prop65.



Caution

This manual uses the term **Caution** to indicate a potentially hazardous situation, which, if not avoided, may result in minor injury or property damage. It may also be used without the symbol to alert you to avoid unsafe practices.

Failure to avoid the following potentially hazardous situations may result in injury or property damage.

The unit is designed to provide you with route suggestions. It does not reflect road closures or road conditions, traffic congestion, weather conditions, or other factors that may affect safety or timing while driving.

Use the unit only as a navigational aid. Do not attempt to use the unit for any purpose requiring precise measurement of direction, distance, location, or topography. This product should not be used to determine ground proximity for aircraft navigation.

The Global Positioning System (GPS) is operated by the United

States government, which is solely responsible for its accuracy and maintenance. The government's system is subject to changes which could affect the accuracy and performance of all GPS equipment, including the unit. Although the unit is a precision navigation device, any navigation device can be misused or misinterpreted and, therefore, become unsafe.

The unit has no user-serviceable parts. If you ever have a problem with your unit, take it to an authorized Garmin dealer for repairs.

The unit is fastened shut with screws. Any attempt to open the case to change or modify the unit in any way voids your warranty and may result in permanent damage to the equipment.

Important Information

MAP DATA INFORMATION: One of the goals of Garmin is to provide customers with the most complete and accurate cartography that is available to us at a reasonable cost. We use a combination of governmental and private data sources, which we identify in product literature and copyright messages displayed to the consumer. Virtually all data sources contain inaccurate or incomplete data to some extent. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

NOTICE: This Category II radio communication device complies with Industry Canada Standard RSS-310.

Caring for Your StreetPilot 2730

The StreetPilot 2730 is constructed of high quality materials and does not require user maintenance other than cleaning.

Cleaning the Unit

Clean the unit's outer casing using a cloth dampened with a mild detergent solution and then wipe dry. Avoid chemical cleaners and solvents that can damage plastic components.

Caring for the Touch Screen

The touch screen is intended to be operated with a finger. Never use a hard or sharp object to operate the touch screen or damage may result. Though a PDA stylus can also be used to operate the touch screen, never attempt this while operating a vehicle.

Clean the touch screen using a soft, clean, lint-free cloth. Use water, isopropyl alcohol, or eyeglass cleaner if needed. Apply the liquid to the cloth and then gently wipe the touch screen.

Protecting Your StreetPilot 2730

- Do not store the unit where prolonged exposure to extreme temperatures can occur (such as in the trunk of a car), as permanent damage may result.
- To avoid theft, do not leave your StreetPilot in plain sight when you leave your vehicle.
- Do not store alkaline batteries in the remote control for extended periods of time. To reduce the chance for battery leakage in the battery compartment, remove the batteries when storing the remote control for more than six months.

FIND IT AND GO!

Use the Garmin StreetPilot 2730 to find your destination and go to it.

Finding a Restaurant

1 Touch **Where To?**



2 Touch **Food, Hotel...**



3 Touch **Food & Drink.**



4 Touch a food category.



5 Touch a place.



6 Touch **Go To.**



Following Your Route


Follow the route to your destination using the map. As you travel, your StreetPilot guides you to your destination with voice prompts, arrows, and directions along the top of the map. If you depart from the original route, your StreetPilot recalculates the route and provides new route instructions.



Your route is marked with a magenta line.



Follow the arrows.

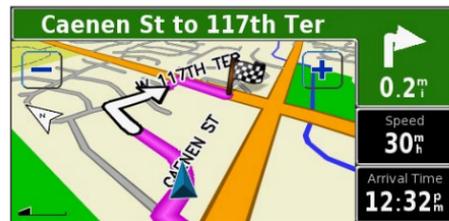

A checked flag marks your destination.

For more information about using the map, see [pages 12–14](#).

Taking a Better Route

The map page displays a  when the StreetPilot has found a better route than the one you are currently taking. Touch the  to take the better route. For more information about Continuous Auto Routing, see [page 41](#).

WHERE TO?

Finding an Address


- ① From the Menu page, touch **Where To?** Touch **Address**.



- ② Touch a state. Touch **Search All Cities** or select a city.



- ③ Enter the address number and touch **Done**.

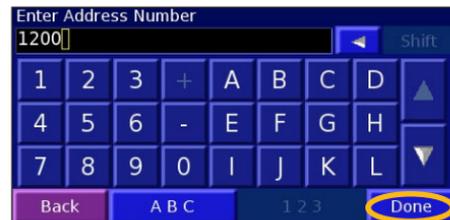


- ④ Enter the street name and touch **Done**.



- ⑤ Select the street and then select the city.




- ⑥ Select the address, if necessary. Touch **Go To**.

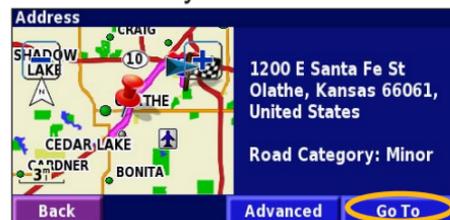

Using the Where To? Menu

The Where To? menu (also called the Find menu), provides several different categories you can use to search for locations.

From the Menu page, touch **Where To?**

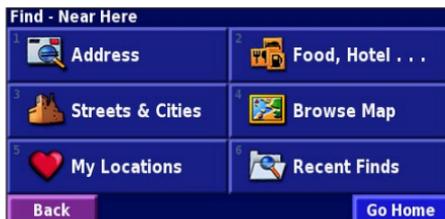


Where To? menu

Address—enter the house number and street name to find a specific address. See [page 3](#).

Food, Hotel...—search for places such as schools, shopping centers, and hospitals. Use the  and  to view all of the categories.

Streets & Cities—find a city, street, intersection, or exit.

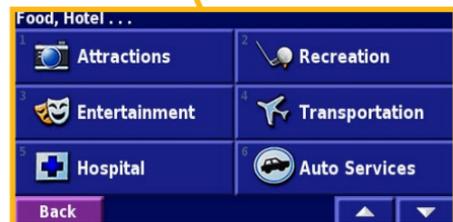

Food, Hotel... menu

Browse Map—use the map to find the location you are looking for. See [page 5](#).

My Locations—save your favorite locations in My Locations. To find the saved places, search in my Locations. See [page 8](#).

Recent Finds—find places you have recently found.

Finding a Place Using the Map

From the Menu page, touch **View Map**. You can also touch  **Where to?** > **Browse Map**. Touch and drag anywhere on the map to browse the map (view different parts of the map).

1 Touch any object on the map. Touch **Review**.



2 Touch **Go To** or **Advanced**.



Tips for Browsing the Map

- Touch the map and drag to view different parts of the map.
- Use the  and  icons to zoom in and out.
- Touch any object on the map. An arrow appears pointing at the object you selected.
- Touch **Review** to open the location's information page; for more information, see [page 6](#).
- Touch **Save As Favorite** to save the location selected by the pointer to your **Favorites**.
- Touch **Back** to return to the previous screen.

Understanding the Information Page

When you find a location, select it in the search results list to open the item's information page.



Information Page

Touch **Go To** to create and follow a route to this location.


Touch **Advanced** to view other options for this location:

- **Insert in Current Route**—add this point as the next stop in your route.
- **Add As Favorite**—add this location to your Favorites. For more information, see [page 8](#).
- **Find Near Point**—find a location near this point.
- **Browse Map**—view this location on the map.

Finding Recently Found Places

Your StreetPilot stores the last 50 places you have found in Recent Finds.

1 Touch **Where To?** > **Recent Finds**.

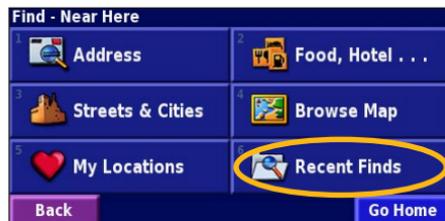

2 Select an item from the search results list.

Select Recent Find	All Categories
1 Thai Place Restaurant	1.0m ↑
2 Loch Lloyd Country Club	9.6m ↖
3 1200 E Santa Fe St	5.1m ↗
4 Loch Lloyd Country Club	10.0m ↖

Navigation buttons: Back, Category, and directional arrows.

Touch **Category** to display recent finds of a certain category, such as **Food, Hotel...**


Finding Places in a Different Area

You can search for locations in a different area, such as a different city or near your destination.

- 1 From the search results list, touch **Near...**



- 2 Select one of the search options.

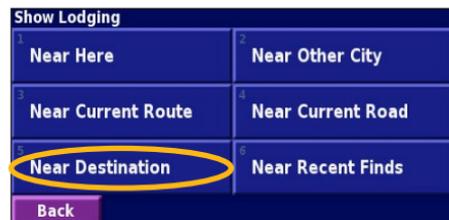

The locations near the option you selected appear.

Narrowing Your Search

To narrow your search, you can spell part of the name of the location you are searching for.

- 1 From the search results list, touch **Spell**.



- 2 Enter part of the name and touch **Done**.



Locations containing the letters you entered appear.

MY LOCATIONS


Saving Places You Find

After you have found a place you want to save, select it on the results list.

1 Touch **Advanced**.



2 Touch **Add As Favorite**.

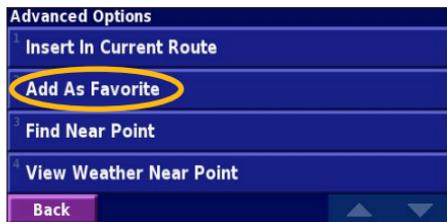

Saving Your Current Location

From the Menu page, touch  **View Map**.

1 Touch anywhere on the map.



2 Touch **Save As Favorite**.



Setting a Home Location

You can set a Home Location for the place you return to most often. From the Menu page, touch **Where To?**


① Touch **Go Home**.



② Select an option.



③ Touch **Save Home**.

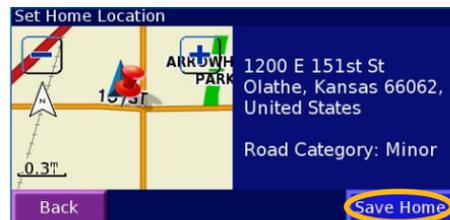


After you set your Home Location, open the Find menu and touch **Go Home**.


Finding Saved Places

From the Menu page, touch **Where To?**

① Touch **My Locations**.

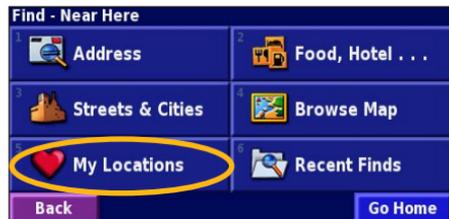

② Touch **Favorites**.

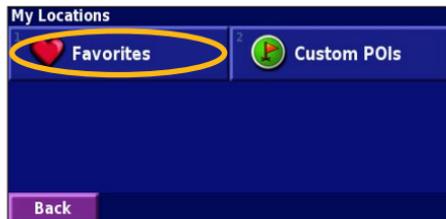

③ Touch a saved place.



Editing Saved Places

From the Menu page, touch **Tools** > **My Data** > **Favorites**.

1 Touch **Edit/Review Favorites**.




2 Touch an item to edit.



3 Touch **Edit**.



4 Touch an item to edit it.

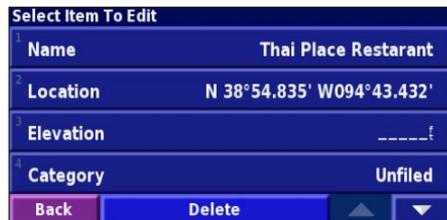

Name—enter a new name for the location using the on-screen keyboard.

Location—edit the location of the place; you can use the map or enter new coordinates using the keyboard.

Elevation—enter the elevation of the saved place.

Category—assign this place to a category; touch  to view the categories.

Symbol—select a symbol to appear on the map for this location.

Deleting a Saved Place

From the Menu page, touch **Tools** > **My Data** > **Favorites**.

1 Touch **Delete Favorites**.



2 Touch **By Selection**.



3 Touch a saved location.



4 Touch **Delete**.



By Selection—touch each location and delete them each individually.

By Category—select one category to delete all of the locations assigned to that category.

Delete All—removes all saved places from your Favorites.

VIEWING THE MAP AND USING THE TOOLS

Viewing the Map Page

From the Menu page, touch **View Map** to open the map. Touch an area of the map to see additional information, as shown below. The position icon ▲ shows your current location.

While navigating a route, touch the green text bar to open the Turn List. See [page 13](#).




Map Page while Navigating a Route

Trip Computer

The Trip Computer indicates your current speed and provides helpful statistics about your trip.

To view the Trip Computer, select **Speed** or **Arrival** on the map. Or, from the Menu page, touch **Tools** > **Navigation** > **Trip Computer**.

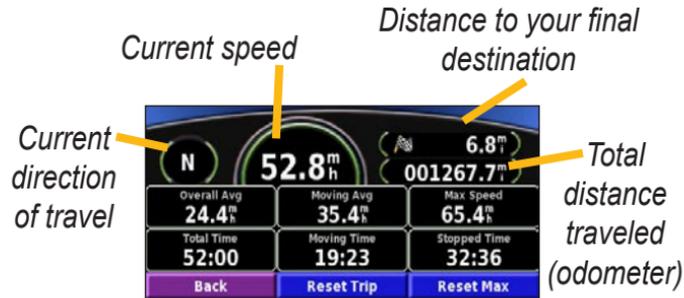

Touch **Reset Trip** to reset all information on the Trip Computer. To reset the Maximum Speed, touch **Reset Max**.

Turn List

The Turn List displays a list of turn-by-turn instructions for your entire route as well as arrival information.

While navigating a route, touch the green text bar on the map page to open the Turn List. Or, from the Menu page, touch **Tools** > **Navigation** > **Turn List**.




Touch **View All** to see all the turns in the route. Touch **▼** and **▲** to scroll through the list.

Touch a turn to see the turn on a map (the Next Turn page). Also, press **Speak** on the remote control to open the Next Turn page. Touch **▼** and **▲** to scroll through all the turns in the route. Touch **+** and **-** to zoom in and out of the turn on the map.

GPS Info Page

From the map or Menu page, touch the signal strength bars in the upper left corner to view the GPS Info page. Or, from the Menu page, touch **Tools** > **Navigation** > **GPS Info**.

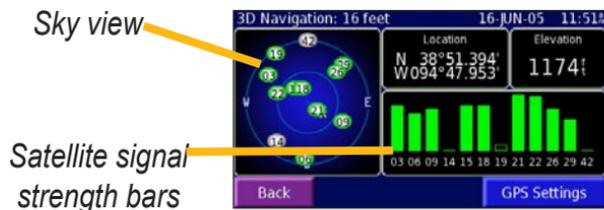

The sky view shows the satellites you are receiving. The satellite signal strength bars indicate the strength of each satellite you are receiving. A solid bar indicates the GPS satellite is ready for use.

GPS Settings

From the Menu page, touch **Settings** > **General** > **GPS**. You can also access the GPS Settings by touching the **GPS Settings** button on the GPS Info page.

Use Indoors—touch **Yes** to turn the GPS receiver off and use the unit indoors.

Set Position—set your position, if Use Indoors is enabled. Select your location on the map and touch **OK**.

WAAS/EGNOS—disable and enable WAAS/EGNOS. WAAS and EGNOS are systems of satellites and ground stations that provide GPS signal corrections, giving you even better position accuracy. To learn about WAAS and EGNOS, visit www.garmin.com/aboutGPS/waas.html.

Weather, Stocks, and Traffic

You need an XM Smart Antenna and a subscription for services to use weather, stocks, traffic, and XM Radio. Refer to the *GXM 30 XM Smart Antenna Owner's Manual*. See [pages 34–35](#) of this manual for information about traffic.

CREATING AND EDITING ROUTES

Creating a New Saved Route

From the Menu page, touch **Tools** > **My Data** > **Routes**.


- ① Touch **Create New Saved Route**.



- ② Touch a method and touch **Next**. Select the start point.




- ③ Touch a method and touch **Next**. Select the end point.

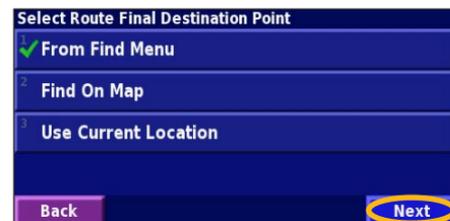


- ④ To add a stop, touch **Yes**, then touch **Next**. Select the point.



- ⑤ Select your preference and touch **Next**.

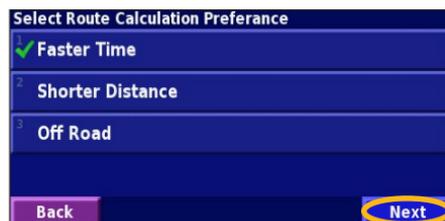

- ⑥ Touch **Finish**.

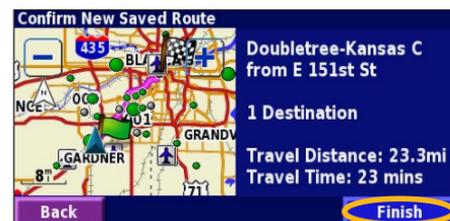

Editing a Saved Route

From the Menu page, touch **Tools** > **My Data** > **Routes**.


1 Touch **Edit/Review Routes**.



2 Touch the route to edit.



3 Touch **Edit**.

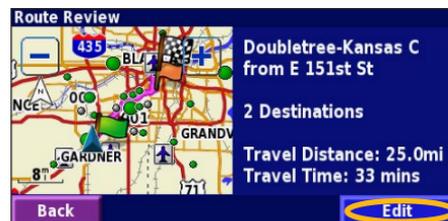

4 Touch the item to edit.



Rename—enter a new name for the route using the on-screen keyboard.

Edit/Review Points—add, arrange, remove, re-order, and review points in the route. For more info, see [page 17](#).

Change Preference—change calculation preference to Faster Time, Shorter Distance, or Off Road.

Delete Route—delete this route.

Adding Midpoints (Stops) to Your Route

You can add midpoints (also called via points or stops) to your route as you create it, as described on [page 15](#). You can also add points to your route when you edit the route, as described below. Follow the steps on the previous page to begin editing the route.


1 Touch **Edit/Review Points**.




2 Touch **Add**.




3 Touch where you want to add the point.

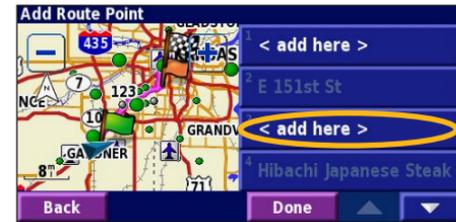

4 Touch a method and then select the point.

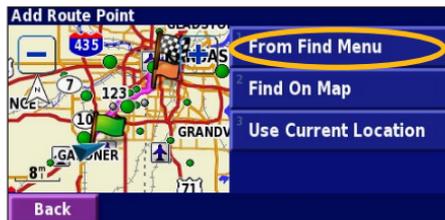

5 Add points as necessary. Touch **Done** when finished.

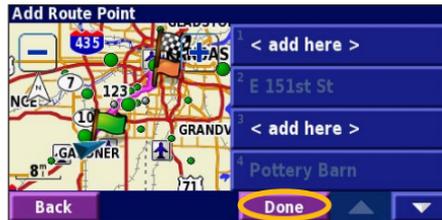

Auto Arrange—arranges the points to provide the shortest route.

Remove—touch the point you want to remove and then touch **Remove**.

Re-Order—touch the point to move and touch **Move Up** or **Move Down**. Touch **Done** when finished.

Saving the Active Route

From the Menu page, touch **Tools** > **My Data** > **Routes** > **Save Active Route**.

Navigating a Saved Route

From the Menu page, touch **Tools** > **My Data** > **Routes** > **Navigate Saved Route**. Touch the route you want to navigate.

Recalculating the Route

From the Menu page, touch **Tools** > **My Data** > **Routes** > **Recalculate Route**.

Deleting All Saved Routes

From the Menu page, touch **Tools** > **My Data** > **Routes** >  > **Delete All Saved Routes**.

Stopping Your Route

From the Menu page, touch **Stop**.

Adding a Detour to a Route

If you need to take a detour from your current route, open the Menu page and touch **Detour**.

1/2 mile, 2 miles, or 5 miles—select the distance of the detour. For example if a road sign indicates that the street is closed for the next 2 miles, touch **2 miles** in the list. Your StreetPilot recalculates your route for the next two miles.

Detour by Road(s) In Route—select roads in your route to avoid. For example, if the highway ramp is closed, select the ramp in the list of roads. Your StreetPilot recalculates your route to avoid that ramp.

Detour by Traffic Event on Route—if you are using an FM Traffic Receiver or XM NavTraffic, you can detour around traffic events.

Remove All Detours—touch to remove any detours you have entered for the route.

Adding Avoidances

From the Menu page, touch **Settings** > **Navigation** >  > **Avoidance Setup**. Select the road type to avoid. Touch  to view more road types to avoid.

Creating Custom Avoids

You can enter specific areas and roads to avoid in your routes. From the Avoidance Setup menu, touch  two times and then touch **Custom Avoids**.

- 1 Touch **Add New Avoid Area** or **Add New Avoid Road**.



- 2 Touch the first corner and touch **Next**.



- 3 Touch the second corner and touch **Next**.



- 4 Touch **Finish**.



USING THE LOGS

Adjusting the Track Log

As you travel, the StreetPilot creates a bread crumb trail (track log) of your movement. From the Menu page, touch **Tools > My Data > Track Log**.

Recording—turn off and on the track log recorder.

Percentage Full—displays the current percentage capacity of the track log. To clear the track log, touch **Percentage Full > Yes > OK**.


Displaying the Track Log

From the Menu page, touch **Settings > Map > Zoom Level Detail > Track Log**. Select a zoom setting at which the track log is shown. Touch **OK**.

Your track log now appears as a fine dotted line on the map.

Using the Mileage Logs

You can keep four different mileage logs of your travels. From the Menu page, touch **Tools > My Data > Mileage Log**. Touch a log to edit it.

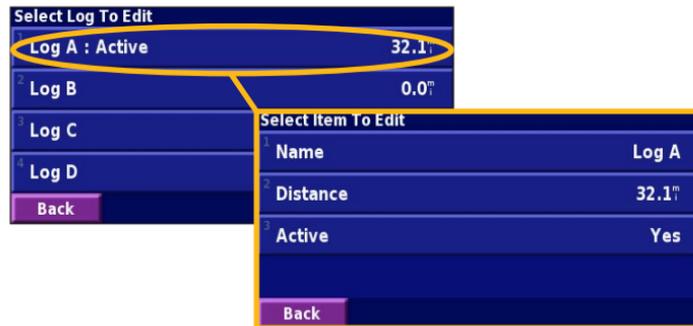

Name—enter a new name.

Distance—reset the mileage log.

Active—make this log active or inactive.

LOADING FILES ON YOUR 2730

Your 2730 can store files, such as MP3 music files and audible books. Using the USB Mass Storage mode, copy and paste files to the 2730 internal memory.

Step 1: Load the USB Drivers

Before connecting the USB cable to your computer, place the enclosed USB Driver CD-ROM into your computer's CD-ROM drive.

If the CD-ROM does not start automatically, click **Start** and then **Run...** Type the letter of your CD-ROM drive followed by "setup" (example: "D:\setup"). Then press **Enter**. Follow the on-screen instructions.

Step 2: Connect AC Power

Connect the enclosed AC Power cable to the Power connector on the back of the StreetPilot. Connect the end to an available electrical outlet.

Step 3: Connect the USB Cable

Use the USB cable provided to connect the 2730 to your computer. Also use the USB cable when updating the StreetPilot software or loading additional maps.

To connect your StreetPilot to your computer:

1. Plug the small end of the USB cable into the connector located on the back of your StreetPilot.
2. Connect the larger end of the USB cable to an available USB port on your computer.



Step 4: Select USB Mass Storage

After connecting the USB cable to the StreetPilot and your computer, flip the **Power** switch down to turn on the StreetPilot. The following screen appears:



To transfer files to your StreetPilot, touch **USB Mass Storage**.

If you would like to use MapSource or update your software, touch **Garmin Mode**.

Step 5: Transfer Files

After you connect your StreetPilot to your computer and select **USB Mass Storage**, you are ready to transfer files.

1. Double-click the **My Computer** icon  on your computer's desktop.
2. Browse your computer for the file you want to copy.
3. Highlight the file, right-click, and select **Copy**.
4. Open the "GARMIN" drive (see [page 24](#)).
5. Select **Edit > Paste**. The file then appears in the list of files on the "GARMIN" drive.

Where Do I Paste the Files?

For most files, like your MP3 files, you can paste them anywhere in the "GARMIN" drive. When you transfer Audible Books, AudibleManager places the books in an Audible folder. The POI Loader places custom POIs in the POI folder.

Deleting Files from Your StreetPilot

You can delete files from your StreetPilot just as you would delete files from your computer.

With the StreetPilot connected to your computer and in **USB Mass Storage** mode, open My Computer. Open your “GARMIN” drive. Highlight the file that you want to delete from your StreetPilot and press the **Delete** key on your computer’s keyboard.



CAUTION: Do **not** delete any files if you are not sure of their purpose. Your StreetPilot contains important map data files that should **not** be deleted. Be especially cautious of deleting files located in folders titled “garmin.”

Additional Help

For troubleshooting tips for using the StreetPilot with your computer to transfer files, see [page 52](#).

Step 6: Eject and Unplug the USB Cable

When you are finished transferring files, double-click the **Unplug or Eject**  icon in your system tray. Select “USB Mass Storage Device” and click **Stop**. Select the “GARMIN” drive and click **OK**. You can disconnect your StreetPilot from your computer now.




Information about the Drive

After you connect your StreetPilot to your computer, a Removable Disk Drive entitled “GARMIN” appears in your computer’s list of drives.

If you are connected to several network drives, the “GARMIN” drive might not appear. To display the drive, right-click on a network drive and click **Disconnect**.

Drive Storage Capacity

To view available space for your “GARMIN” drive, right-click on the drive name and select **Properties** from the shortcut menu.

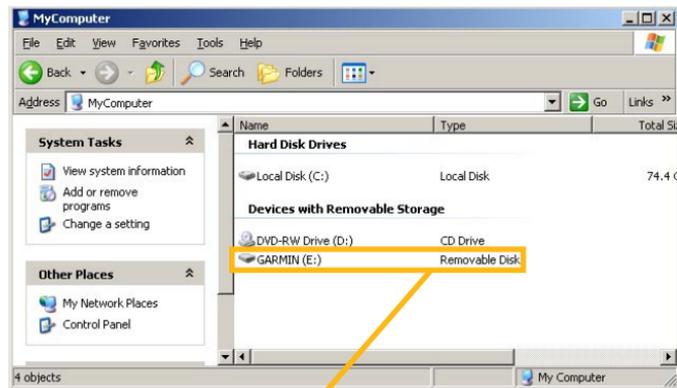

2730 Removable Disk Drive



NOTE: On some Windows Operating Systems, the StreetPilot drive may not be named automatically. Refer to the Windows Help file for directions on renaming your StreetPilot drive.

LISTENING TO MUSIC AND AUDIBLE BOOKS

Playing MP3 Files

1 Touch **Tools**.



2 Touch **Music Player**.




3 Touch **Source** to select **MP3** mode. Touch **Browse**.



4 Touch a category.



5 Touch **Play All**.

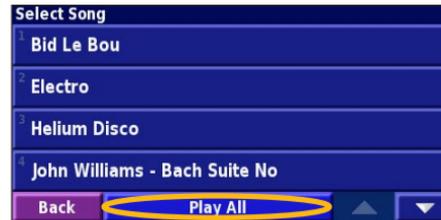

6 Enjoy the music!



Using the MP3 Player



Touch  to adjust the volume.

Touch  to play the beginning of the song again and touch twice to play the previous song on the playlist.

Touch and hold to rewind the song.

Touch  to skip to the next song on the playlist. Touch and hold to fast forward through the song.

Touch  to pause the song. Touch  to resume play.

Touch  to repeat the song (repeat mode).

Touch  to shuffle the playlist (shuffle mode).

Touch **Playlist** to view all of the songs in the playlist. To start playing the playlist from a different song, touch the song.

Touch the album cover to view information about the song, artist, and album.



Listening to Audible Books

Your StreetPilot provides several sample Audible books. These sample books are only portions of the book; to hear an entire book, purchase it from Audible.com. See [pages 29–31](#).


1 Touch **Tools**.




2 Touch **Music Player**.




3 Touch **Source** to select **Audible Book** mode.

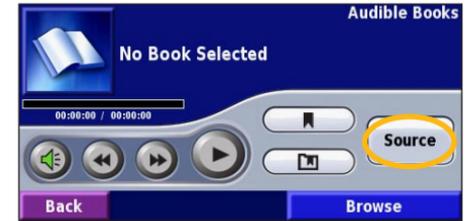

4 Touch **Browse**.

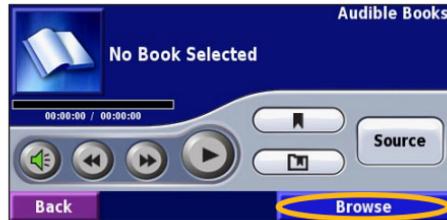

5 Touch the book title.

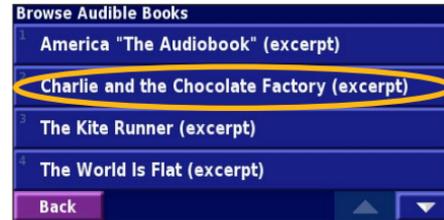

6 Touch .



Moving around the Book



Touch  to adjust the volume.

Touch  to play the previous section of the book.

Touch and hold to skip back through the book (rewind).

Touch  to skip to the next section of the book. Touch and hold to skip forward through the book (fast forward).

Touch  to pause the book. Touch  to resume playing the book.

Touch the book cover art to view information about the book.

Using Bookmarks

To create a bookmark, touch  and touch **Save**.

To view your bookmarks, touch  and then touch a bookmark. Touch **Play** to listen to the book from the bookmark. Touch **Edit** to delete the bookmark or rename the bookmark.

Tip

*When you are playing an audible book, press the **Page** button on the remote control repeatedly to view other pages in the StreetPilot (such as the map).*

Getting Started with Audible.com

Before you can listen to audible books on your StreetPilot, you need to complete a few setup steps. These are all one time processes.

Step 1: Load the USB Drivers

If you have not already loaded the USB drivers to your computer, do so now. Before connecting the USB cable to your computer, load the USB drivers to your computer using the enclosed USB Driver CD-ROM. See [page 21](#).

Step 2: Create an Audible Account and download AudibleManager

Go to <http://garmin.audible.com> and create an Audible.com account. After you create an account, download AudibleManager to your personal computer. You can purchase a book now, or wait until step 5.

Step 3: Activate Your StreetPilot with AudibleManager

Before you can listen to a book you have downloaded from Audible.com, you must activate your StreetPilot to use with AudibleManager.

1. Disconnect your StreetPilot from your computer: double-click the **Unplug or Eject**  icon in your system tray. Select “USB Mass Storage Device” and click **Stop**. Select the StreetPilot drives and click **OK**. Unplug the USB cable from your StreetPilot.
2. From your computer’s desktop, double-click the AudibleManager icon to open AudibleManager.
3. In the “Choose your device” window, click the box next to “Garmin” to place a check mark in the box. Click **Next**.

4. Enter your Audible user name and password.
Click **Next**.
5. Connect your StreetPilot to your computer using the USB cable. Touch **USB Mass Storage**. Wait a few moments for AudibleManager to detect your StreetPilot.
6. Select **Activate my player(s)** and click **Next**.
7. Please wait while AudibleManager attempts to activate your StreetPilot. Upon completion, a message appears saying the process was successful. Click **Finish**.



NOTE: *If you are unable to connect to the Internet or have any other problems activating your StreetPilot, refer to the Audible Manager Help file. Select **Help** from the menu and click **Help**.*

Loading Audible Books to Your StreetPilot

Each time you want to load an audible book to your StreetPilot, follow these steps:

Step 1: Connect the StreetPilot to your computer

1. Connect the mini-USB connector to the back of the StreetPilot.



2. Connect the larger end of the cable to an available USB port on your computer.

Step 2: Purchase and download the book to your computer

Refer to AudibleManager's Help file for detailed instructions about downloading books to your computer and loading them on your StreetPilot.

If you have not purchased audible books yet, you can purchase them now. They are added to your online library so you can download them to your computer.

1. From your computer's desktop, double-click the AudibleManager icon to open AudibleManager.
2. Click the **Go to My Library Online** button on the top center of the window. Your Audible.com library opens, displaying the books you have purchased.
3. Click **Get it Now** to download the book to your computer.
4. Select a format and click **Download**.

Step 3: Transfer the book to your StreetPilot

Refer to AudibleManager's Help file for detailed instructions about downloading books to your computer and loading them on your StreetPilot. You must first activate your StreetPilot before transferring books; see [page 29](#).

1. Open AudibleManager.
2. Select the book title. Click **Add to Garmin StreetPilot 2730** in the top left corner.
3. Select how much of the book you want to load. You can load small sections at a time to save memory. Click **OK**. AudibleManager transfers the book to your StreetPilot.
4. When you are finished, double-click the **Unplug or Eject Hardware** icon . Click **Stop** and **OK**.

LISTENING TO AUDIO OVER THE VEHICLE'S SPEAKERS

You can listen to the StreetPilot's audio output over your vehicle's speakers. Plug the 12-Volt adapter into an outlet in your vehicle and find an unused FM frequency on your radio.

- 1 From the Menu page, touch **Volume**.



- 2 Touch **Settings**.




- 3 Touch **Audio Output**.



- 4 Touch **FM Transmitter** and then **Next**.



- 5 Use the + and - to match the frequency selected on your radio and touch **Done**.

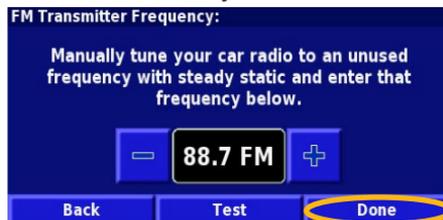

See the [page 33](#) for tips on finding a good frequency for the FM transmitter.

FM Transmitter Tips

The FM transmitter is intended to transmit your StreetPilot's audio to your car stereo's antenna.

Do not adjust your FM settings while you are driving your vehicle.

When searching for an appropriate FM frequency on your vehicle's radio, look for an unused frequency that has steady, consistent static. If you hear slight noises and sounds in the background of the static, choose a different frequency.

Touch **Test** to play a sample audio output over your vehicle's stereo. If the sound is not to your liking, try a different frequency and touch **Test** again.

As you travel, you might need to change the frequency for the FM transmitter. A frequency not used by a radio station in your area might be used by a station elsewhere.

As you drive, you may notice changes in the background static even though there is no FM station using that channel. You may notice this as you drive through intersections where certain kinds of traffic lights or other municipal electronic systems are operating. You might also notice this effect when the terrain changes, allowing distant stations to be received by your car stereo that were not received when you made your initial frequency selection. These and other sources of electrical interference may make it necessary to look for another frequency.

The distance between the 12-Volt adapter, the StreetPilot, and the vehicle antenna may also affect the noise level. Vehicles with antennas located far away, such as a rear-mounted antenna, may experience more interference from outside noise sources than vehicles with front mounted antennas.

TRAFFIC INFORMATION

Using an XM Smart Antenna, your StreetPilot 2730 can receive and use traffic information. When a traffic message is received, your 2730 displays the event on the map and can change your route to avoid the traffic incident.

For more information about the GXM 30 XM Smart Antenna, refer to the *GXM 30 XM Smart Antenna for Automotive Owner's Manual* or visit the Garmin Web site (www.garmin.com). For coverage cities for XM NavTraffic, see www.xmnavtraffic.com

Connecting the GXM 30 to Your StreetPilot

Plug the cable from the GXM 30 into the USB connector on the back of the StreetPilot. For more information, refer to the *GXM 30 XM Smart Antenna for Automotive Owner's Manual*.

Viewing Traffic Events

From the Menu page, touch **Tools** > **Traffic**. Select an item in the Traffic Events list to view the details. Touch **Near...** to view traffic at a different location. Touch **Traffic Map** to view area traffic events on a map.



Changing the Traffic Settings

From the Menu page, touch **Settings** > **Traffic**.



Traffic Setting Menu

Subscriptions—view your traffic subscriptions. If you have the GXM 30 connected, touch **Subscriptions** to view the software version, your XM subscriptions, and the antenna’s Radio ID. Touch **Subscribe** to add an XM subscription.

Symbols on Map—change the symbols used to indicate the type of traffic event. Touch **Style** to use **American** or **International** symbols. Touch each symbol to set the zoom scale at which each symbol appears on the map.

Severity on the Map—select the scale at which the severity is shown on the map.

Audio Notification—turn on or off the audio notification when a traffic event occurs on the road you are traveling on or the route you are navigating.

Avoid Traffic—enable or disable the StreetPilot to avoid traffic events when generating a route.

Adding an XM Traffic Subscription

For more information about XM subscriptions, refer to the *GXM 30 XM Smart Antenna for Automotive Owner’s Manual*.

CUSTOMIZING THE STREETPILOT 2730

Adjusting the Volume

From the Menu page, touch **Volume**. Touch the  and  to adjust the volume of the speaker. Touch **Mute** to silence the audio output.



Touch **Settings** to open the Audio Settings page. See [page 37](#) for more information.

Touch **Advanced** to adjust the volume levels of the navigation prompts, XM, MP3/Audible books, and Line In device.

Customizing the General Settings

From the Menu page, touch **Settings** >  **General**.



GPS

From the Menu page, touch **Settings** > **General** > **GPS**. See [page 14](#).

Changing the Language

From the Menu page, touch **Settings** > **General** > **Language**.

Voice Language—change the language for all voice prompts and messages. Touch the voice you want to use and touch **OK**. To delete that voice from your StreetPilot, touch **Delete** and **OK**.

Your StreetPilot contains two different types of voice languages: text-to-speech and pre-recorded.

Languages noted with a person's name and (TTS) are text-to-speech (TTS) voices: for example, American English-Jill (TTS) is a text-to-speech voice. The text-to-speech voices “read” and “speak” the same words that appear on the StreetPilot. The voices have an extensive vocabulary, and they pronounce the street names as you approach turns.

Languages without a person's name are pre-recorded voices, which have a limited vocabulary and do not speak names of locations or streets.



NOTE: *If you change the Voice Language, your StreetPilot must restart to complete this change.*

Text Language—change the on-screen text to the selected language. Changing the Text Language does not change the language of map data or user-entered data.

Speech Rate—select the rate at which prompts are spoken.

Customizing the Keyboard

From the Menu page, touch **Settings** > **General** > **Keyboard**.

Input Type—select the **English Only** keyboard, or select **West European** to use diacritical characters.

Customizing the Audio Settings

From the Menu page, touch **Settings** > **General** > **Audio**.

Audio Output—select Internal Speaker or FM Transmitter. For more information about broadcasting the StreetPilot audio over your vehicle's stereo using the FM Transmitter, see [page 32](#).

Attention Tone—turn on or off the attention tone sounded before voice prompts.

Touch Screen Tone—turn on or off the tone sounded each time you touch the screen.

Keypress Tone—turn on or off the tone sounded each time you press a button on the remote.

Speed Adjusted Volume—select how much the volume increases as your speed increases. Low increases your volume only slightly; High increases your volume the most.

Audio Jack—select Headphones when using headphones. Select Line Out if you are connecting to the audio input of another device (like a car stereo), and excessive audio noise is heard.

Customizing Proximity Alerts

From the Menu page, touch **Settings > General > Proximity Alerts**. This adjusts the visual and audio notifications for custom POIs you have loaded on the StreetPilot. See [page 47](#) for more information.

Changing Your Time Settings

From the Menu page, touch **Settings > General > Time**.

Time Zone—select your time zone.

Time Format—select 12 or 24 hour time format.

Daylight Saving—select Auto, Yes, or No. The Auto setting automatically adjusts the time for daylight saving based on your time zone.

Selecting Units


From the Menu page, touch **Settings > General > Units**. Change units of measure to Statute, Metric, or Custom.

Turning Safe Mode Off and On

From the Menu page, touch **Settings** > **General** > **Safe Mode**. Turn on or off the Safe Mode, which disables all unit functions that require significant operator attention and could become a distraction while driving.

Changing the Map Settings

From the Menu page, touch **Settings** >  **Map**.

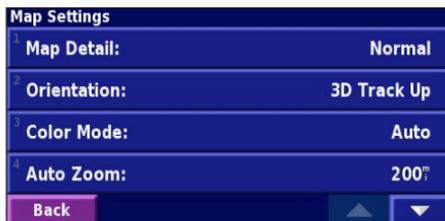

Map Detail—adjust the amount of detail shown on the map. Displaying more detail causes the map to redraw slowly.

Orientation—change the perspective of the map.

- **2D North Up**—display the map in 2 dimensions (2-

D) with North at the top.

- **2D Track Up**—display the map in 2 dimensions (2-D) with your direction of travel at the top of the screen.
- **3D Track Up**—display the map in 3 dimensions (3-D), with your direction of travel at the top of the screen. This is the default map view.

Color Mode—select **Day** for a bright background. Select **Night** for a black background. Select **Auto** to automatically switch between the two.

Auto Zoom—disable or enable automatic zooming on the map for optimal viewing. You can also specify a maximum Auto Zoom distance, 120 feet to 800 miles.

Route Color—select the color of the route line.

Dim Roads—dim roads that are not on your route. You can customize this setting to Never or While Routing.

Map Data Fields—adjust the size and content of the data fields shown on the Map page. Select **None** to remove the data fields to see more of the map. Select **Wide** to make the data fields larger; they take up more room on the map. Select **Thin** to see make the data fields thinner so you can see more of the map. See [page 48](#) for more information.

Text Size—adjust the size of text shown on the map.

Zoom Level Detail—customize which map items appear at various zoom levels. For each map item, you can select Off, Auto, or a maximum zoom distance, from 120 feet to 800 miles.



NOTE: *More detail increases the time it takes the map to refresh.*

Detail Maps—enable and disable the detailed maps loaded in your StreetPilot.


Changing the Navigation Settings

From the Menu page, touch **Settings** >  **Navigation**.

Vehicle—specify your vehicle type.

Preference—select a preference for route calculations.

Ask Preference—select whether the unit asks for your preference each time it calculates a route.

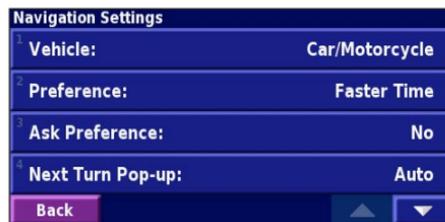

Next Turn Pop-up—select when the Next Turn pop-up window appears.

Off-Route Recalculation—set the way the unit responds when off the route. You can silence the “off-route, recalculating” message here.

Continuous Auto Routing—enable or disable the Continuous Auto Routing feature. This feature allows the StreetPilot to continually search for a better route to your destination. Continuous Auto Routing may be useful if a traffic accident occurs or there are time-restricted turns on the current route. A  appears on the map when the StreetPilot has found a better route than the one you are currently taking. Touch the  to take the better route.

Avoidance Setup—see [page 19](#).

Adjusting the Traffic Settings

See [page 35](#).

Changing the Screen Settings

From the Menu page, touch **Settings** >  **Screen**.

Brightness—select **Manual** and then touch **Next**. Touch the  to decrease the brightness of the backlight or  to increase it. Select **Auto** for automatic brightness adjustment.

Calibrate Touch Screen—if you think the touch screen is not responding properly, you can calibrate the screen. Follow the on-screen instructions.

Viewing Unit Information (About)

From the Menu page, touch **Settings** >  **About** > **StreetPilot**. The unit's software version, audio version, and unit ID are listed.



XM—If you have an XM Smart Antenna, you can view the XM Antenna’s Radio ID. Connect the GXM 30 to the StreetPilot.

Copyright Info—view copyright information about your StreetPilot.

Restoring the Settings

To restore the unit to its original settings, open the Menu page and touch **Settings** > **Restore Defaults** > **Yes**.

APPENDIX

Using the Remote Control

The remote control operates using two AAA batteries. To use the remote, aim it toward the IR window on the front left of the StreetPilot.

(Zoom) In—zooms into the map.

(Zoom) Out—zooms out of the map.

Menu—opens the Menu page. Press repeatedly to scroll through the Menu page, the Tools menu, and Settings menu.

Map—opens the map page. Press repeatedly to scroll through the Map, Menu, and Music Player.

Back—returns to the previous page and cancels data entry.

Speak—announces the next turn or the GPS status.



Thumb Stick—highlights options and moves the map pointer. Press in to make a selection.

Page ▲ and ▼—scrolls through lists and pages.

Vol + and -—raises and lowers the volume.


Alphanumeric Keys—enters numbers and letters. To enter letters or numbers, press the key repeatedly until the correct character appears.

◀◀ (7)—acts like the rewind button in the Music Player.

▶▶ (9)—acts like the fast forward button in the Music Player.

▶/|| (0)—acts like the Pause/Play button in the Music Player.

Looking at the StreetPilot 2730

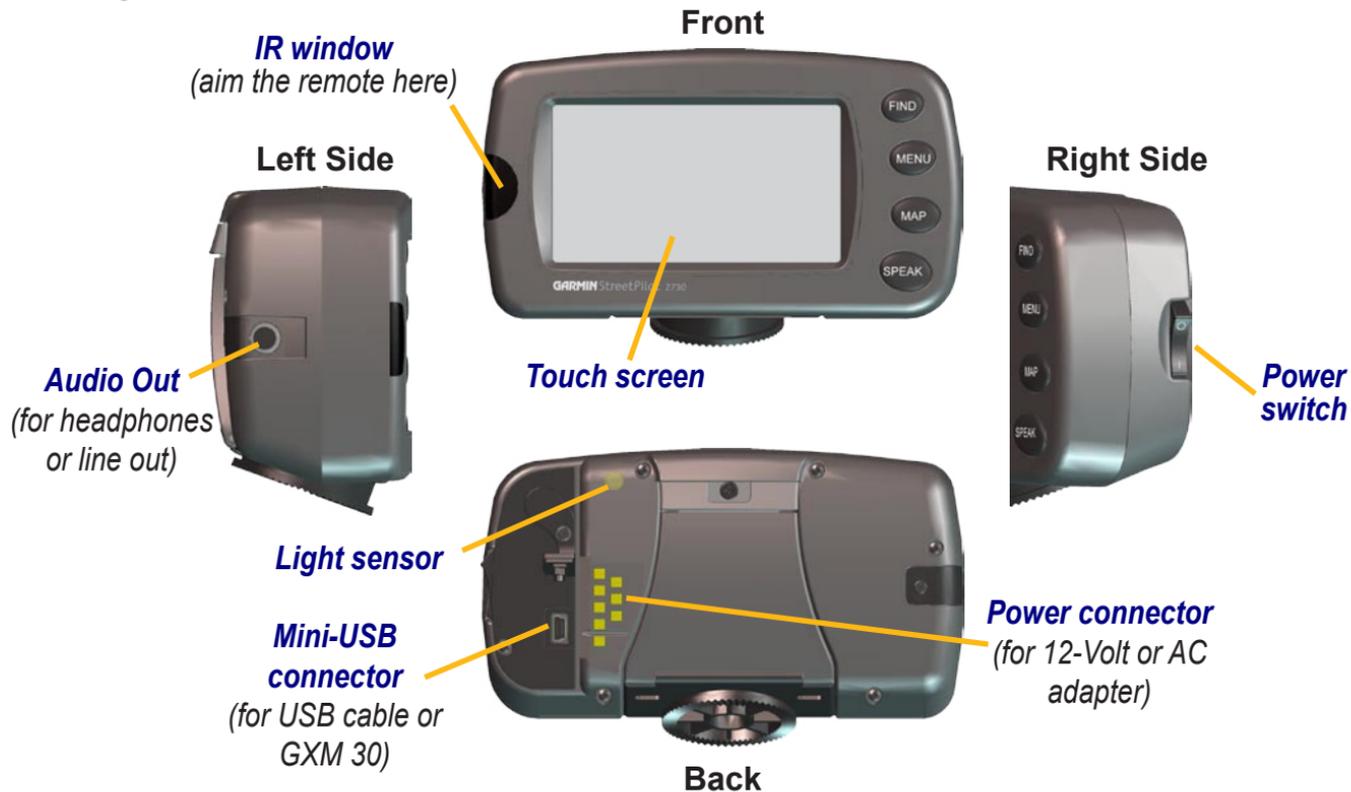

Using the 2730 Unit Keys



- ① **FIND**—opens the Find menu. Press twice and the StreetPilot automatically starts calculating your route home (if specified). Press and hold to view Recent Finds.
- ② **MENU**—opens the Menu page. Press repeatedly to scroll through the Menu page, Tools menu, and Settings menu.
- ③ **MAP**—opens the Map page. Press repeatedly to scroll through the Map page, Turns List, Trip Computer, and Music Player.
- ④ **SPEAK**—announces voice directions.

StreetPilot 2730 Owner's Manual

Installing the 2730 in Your Vehicle

You can use the permanent or temporary adhesive disks or the non-skid friction mount to install the StreetPilot in your vehicle.

To attach the mounting disk to your dashboard:

1. Clean and dry the area where you want to place the mount.
2. Remove one side of the backing from the adhesive and place the adhesive on the bottom of the mounting base.
3. Place the mounting base so the locking lever is facing you and then position the base on the cleaned area. Apply pressure to adhere the base to the dashboard.



NOTE: The permanent adhesive disk is extremely difficult to remove. Only install if you are sure you want to leave the mount in that location.

To mount your StreetPilot 2730:

1. Align the power plug on the vehicle adapter to the connector and slide the plug into the connector until fully seated.



2. Slide the locking lever on the mounting base to the left (unlocked).

3. Slide the bottom of the StreetPilot into the mounting base until it clicks into place.



4. Slide the base's locking lever to the right (locked).
5. Plug the power cable into an available 12-Volt receptacle in your vehicle.
6. Route the cable so it does not interfere with vehicle operation.

Custom POIs (Points of Interest)

Your StreetPilot 2730 can accept custom points of interest (POI) databases, available from various companies on the Internet. Some custom POI databases contain alert information for points such as safety cameras and school zones. Your StreetPilot can notify you when you approach one of these points.

After downloading your POI database, use the Garmin POI Loader to install the POIs into your unit. The POI Loader is available at www.garmin.com/products/sp2730. Select **Updates and Downloads**. Refer to the POI Loader Help file for more information; press F1 to open the Help file.



CAUTION: *Garmin is not responsible for the consequences of using a custom POI database or the accuracy of the safety camera or other custom POI database.*

Adjusting the Proximity Alerts

To turn on or off the proximity alerts, open the Menu page and touch **Settings > General > Proximity Alerts**.



Audio Notifications—turn off or on the alerts that sound as you approach a custom POI.


Visual Notification—turn off or on the pop-up alerts that appear as you approach a custom POI.

Continuous Notification—select which alerts (which types of POIs) you will be continually notified of.

Customizing the Map Data Fields

You can customize the information that appears in the data fields on the Map page. From the Menu page, touch **Settings** >  **Map** >  > **Map Data Fields**.

- 1 Touch **Wide** or **Thin**.
Touch **Next**.

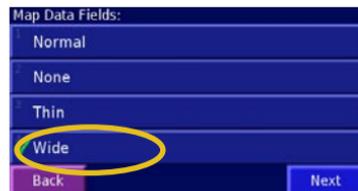

- 2 Touch a preprogrammed configuration or **Custom Fields**.




- 3 Touch the data field you want to customize.



- 4 Touch the type of data to appear in this field.



- 5 Touch **+** and **-** to change the field layout. Touch **OK**.

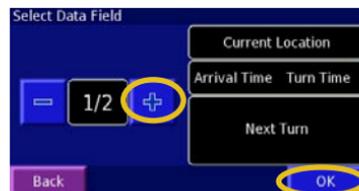

- 6 Touch **Next**. Repeat for the available data fields. When done, touch **Finish**.



1/2, 2/2, 1/3?

1/2 indicates this is your first choice out of two choices for the layout of the data field. 2/2 means this is your second choice. Some types of data fields allow you three choices, but some only provide one.

Technical Specifications

Size: 5.6" W x 3.2" H x 2.0" D (14.3 x 8.0 x 5.0 cm)

Weight: 0.93 lbs (420 g)

Unit Case: Rugged; fully gasketed; IPX-7 waterproof*

Display: Sunlight-readable, 17:9 WQVGA automotive color TFT display with touch screen and auto dimming; 454 pixels by 240 pixels.

Map Storage: Pre-programmed internal memory

Temperature: 5° to 158°F (-15° to 70°C)

Power Supply

Source: 12 VDC

Usage: 12 watts maximum @ 13.8 VDC

Fuse: 3AG - 1.0 Amp

Remote Control: Two AAA alkaline batteries (not included)

For a complete list of specifications, visit the Garmin Web site: www.garmin.com/products/sp2730/spec.html.

Contact your local waste disposal department for information on properly disposing of the unit.

* The Remote Control is not waterproof.

Changing the Fuse

A 3AG 1.0 Amp fast blow fuse is located at the tip of the vehicle adapter. If you need to change the fuse, simply unscrew the black, round end piece and replace the fuse.



Updating the Software and Map Data

If you register your 2730, you will receive notification of software and map updates. To register your 2730, go to www.garmin.com/registration/selectreg.jsp.

To update the 2730 software:

1. Load the USB drivers using the enclosed CD-ROM. See [page 21](#) for more information.
2. Connect the USB cable to your 2730 and your computer.
3. Connect the AC cable to the power connector on the back of the StreetPilot. Turn on the StreetPilot.
4. Touch **Garmin Mode**.
5. Go to at www.garmin.com/products/sp2730. Select **Updates and Downloads**.

6. Click **Download** next to the unit software.
 7. Read and agree to the terms. Click **Download**.
 8. Select **Run** (or **Open**). Your software is updated.
- Check www.garmin.com/unlock/update.jsp to see if an update for your map software is available.

Using a Remote GPS Antenna

Use an optional external remote GPS antenna (Garmin GA 25) when using the unit in a vehicle with a coated windshield or an in-screen heating system, which can block GPS signals. Connect the antenna to the MCX connector located on the back of the unit. To purchase, go to the Garmin Web site: www.garmin.com/products/sp2730. Click **Accessories**.

FCC Compliance

The unit complies with Part 15 of the FCC interference limits for Class B digital devices FOR HOME OR OFFICE USE. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more stringent than “outdoor” requirements.

Operation of this device is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

The unit does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operate this device under Part 15 regulations.

Software License Agreement

BY USING THE STREETPILOT 2730, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin grants you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin.

You acknowledge that the Software is the property of Garmin and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software are valuable trade secrets of Garmin and that the Software in source code form remains a valuable trade secret of Garmin. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in violation of the export control laws of the United States of America.

Declaration of Conformity

Hereby, Garmin declares that the StreetPilot 2730 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full Declaration of Conformity, see the Garmin Web site for your Garmin product: www.garmin.com/products/sp2730. Click **Manuals** and then select **Declaration of Conformity**.

USB Interface Troubleshooting

Problem/Question	Solution/Answer
How do I know my StreetPilot is in USB Mass Storage Mode?	When your StreetPilot is in USB Mass Storage Mode, a picture of a StreetPilot connected to a computer is shown. Also, your computer should show a new Removable Disk Drive listed in My Computer.
My computer never senses that the StreetPilot is connected.	<ol style="list-style-type: none"> 1. Unplug the USB cable from your computer. 2. Load the USB drivers to your computer. See page 21. 3. Plug the USB cable into your computer. Select USB Mass Storage.
I cannot find any drives named "GARMIN" in my list of drives.	<p>Try the solution listed above.</p> <p>If you have several network drives mapped on your computer, Windows may have trouble assigning drive letters to your StreetPilot drives. Follow the steps on page 53 to assign your drive letters.</p>
A message saying "Unsafe Removal of Device" appears when I unplug the USB cable.	When you are ready to disconnect your StreetPilot from your computer, double-click the Unplug or Eject  icon in your system tray. Select "USB Mass Storage Device" and click Stop . Select the StreetPilot drives and click OK . You can disconnect your StreetPilot from your computer now.

How can I rename my StreetPilot drives?	<ol style="list-style-type: none">1. Open My Computer.2. Select the drive you want to rename.3. Right-click and select Rename.4. Type the new name and press the Enter key.
How do I map my StreetPilot drives in Windows?	<ol style="list-style-type: none">1. Plug in the USB cable to the StreetPilot and your computer.2. Flip the Power switch down on your StreetPilot to turn it on.3. On your computer's desktop, click Start > Settings > Control Panel > Administrative Tools > Computer Management > Storage > Disk Management.4. Select a StreetPilot removable disk drive. Right-click and select Change Drive Letter and Path...5. Select Edit..., select a drive letter from the drop-down list, and click OK.

Tip

Be sure you have loaded the USB drivers before you connect the USB cable. See [page 21](#) for information.

2730 Troubleshooting

Problem/Question	Solution/Answer
The touch screen is not responding to my taps.	Calibrate the screen. Press Menu on the remote. Use the remote to select Settings > Display > Recalibrate . Follow the on-screen instructions.
The audio levels are unequal.	From the Menu page, touch Volume > Advanced . Adjust the levels of each audio item.
How do I clear all my user data?	Turn off the StreetPilot and then turn it back on. During start up, press and hold the Find button. Keep pressing the button until the message “Do you really want to erase all use data?” appears. Touch Yes to clear all user data. All original settings are restored. Your Recent Selections, audible bookmarks, and any saved XM data (such a Artists and Presets) are also deleted.
How do I view weather and stock information on my 2820?	You must have an XM antenna connected and an active XM subscription that includes weather and stock data. Information about XM NavTraffic and XM Satellite Radio services can be found at the XM NavTraffic Web site www.xmnavtraffic.com or www.xmradio.com for XM Radio information.

Limited Warranty

This Garmin product is warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within this period, Garmin will at its sole option repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin authorized dealer or call Garmin Product Support for shipping instructions and an RMA tracking number. The unit should be securely packed with the tracking number clearly written on the outside of the package. The unit should then be sent, freight charges prepaid, to any Garmin warranty service station. A copy of the original sales receipt is required as the proof of purchase for warranty repairs.

Garmin International, Inc. Tel. 913/397.8200 Fax. 913/397.8282

Garmin (Europe) Ltd. Tel. 44/0870.8501241 Fax 44/0870.8501251

Online Auction Purchases: Products sold through online auctions are not eligible for rebates or other special offers from Garmin. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

International Purchases: A separate warranty is provided by international distributors for units purchased outside the United States. This warranty is provided by the local in-country distributor and this distributor provides local service for your unit. Distributor warranties are only valid in the area of intended distribution. Units purchased in the United States or Canada must be returned to the Garmin service center in the United Kingdom, the United States, Canada, or Taiwan for service.

INDEX

Symbols

2 Dimensional 39

3 Dimensional 39

A

Audible.com 29

AudibleManager 29

audible books 27

bookmarks 28

playing 27

transferring 31

audio

jack 38

over the vehicle's

speakers 32

settings 37

version 41

avoidances 19

B

better route 2, 41

bookmarks 28

brightness of the screen 41

browse map 6

C

caring for your StreetPilot vi

clear all user data 54

color mode 39

connecting the USB cable 21

contact Garmin i

continuous auto routing 41

coordinates 10

customizing the

StreetPilot 36–42

general settings 36

map settings 39

navigation settings 40

restoring the settings 42

screen settings 41

volume 36

customizing the StreetPilot

2820

map data fields 48

custom avoids 19

custom POIs 47

D

data fields

changing 48

default settings 42

deleting

all saved routes 18

bookmarks 28

files from the StreetPilot 23

routes 16

saved locations 11

detours 18

diacritical characters 37

disconnecting your

StreetPilot 23, 52

E

edit/review points 16

editing saved places 10

EGNOS 14

eject USB 23

elevation 10

F

favorites. *See* My Locations

adding 6

FCC compliance 51

finding places 3–7

address 3

expand your search 7

item on the map 5

narrow your search 7

recent finds 6

restaurant 1

saved places 9

spell the name 3

find near point 6

FM Transmitter 32, 33

following your route 2

fuse 49

G

GARMIN drive does not

appear 24

general settings 36

Go home 9

GPS

info page 14

settings 36

- H**
home location 9
- I**
indoor use 14
insert in current route 6
installing the StreetPilot 45
- K**
keyboard, on-screen
 customizing 37
- L**
language 36
license agreement 51
locations. *See* My Locations
 category 10
 home 9
 saving 8
 symbol 10
- M**
map data fields, changing 48
Map page 12
 browse 5
- customize 39
 orientation 39
 settings 39
 update maps 50
 zoom 5, 12, 13
- metric units 38
midpoints in the route 17
mileage logs 20
My Locations 8–11
 Favorites 9
 Go Home 9
 Recent Finds 6
 saving 8
- N**
narrowing your search 7
navigating a saved route 18
navigation settings 40
Near button 7
North Up 39
- O**
odometer 13
off-route recalculation 40
- original settings 42
- P**
places
 editing 10
 finding 3–7
 saving 8
POIs (Points of Interest) 47
position icon 12
product support i
proximity alert 47
- R**
recalculating 18, 40
Recent Finds 6
remote control vi, 43
renaming
 bookmark 28
 route 16
 saved location 10
resetting
 clear all user data 54
 max. speed 13
 mileage log 20
- trip computer 13
restoring the settings 42
routes 15–19
 add point 6
 auto arrange 17
 create new 15
 detour 18
 edit a saved route 16
 navigate a saved route 18
 preferences 40
 re-order points 17
 remove points 17
 save the active route 18
 stop 18
- S**
Safe Mode 39
saved places 8
 deleting 11
 editing 10
 finding 9
 naming 10
 renaming 16
saved routes

- deleting 18
 - editing 16
 - navigating 18
 - saving the active route 18
 - screen settings 41
 - serial number i, i–iii
 - settings
 - audio 37
 - general 36
 - GPS 36
 - language 36
 - map 39
 - navigation 40
 - restoring defaults 42
 - screen 41
 - time 38
 - traffic 35
 - units of measure 38
 - volume 36
 - set position 14
 - software license agreement 51
 - software version 41
 - speaker volume 36
 - specifications 49
 - speed (speedometer) 13
 - spell 7
 - stocks 14, 54
 - stops in the route 17
 - stop navigation 18
 - stop USB 23
 - storing the unit vi
 - symbol for locations 10
- T**
- text language 37
 - time 38
 - touch screen vi, 41
 - track log 20
 - track up 39
 - traffic information 34–35
 - transferring files to your
 - StreetPilot 22
 - trip computer 13
 - troubleshooting 54
 - USB 52
 - turn List 13
- U**
- unit ID
 - StreetPilot 41
 - XM 42
 - unplug USB 23
 - USB 21, 23
 - use indoors 14
- V**
- vehicle type 40
 - via points 17
 - viewing the map 12
 - voice language 37
 - volume 36
- W**
- weather 14, 54
 - Where To? 3–7
- X**
- XM 14, 41, 54
 - traffic 34
- Z**
- zoom 5, 12, 13

**For the latest free software updates (excluding map data) throughout the life of your
Garmin products, visit the Garmin Web site at www.garmin.com.**



© Copyright 2005–2006 Garmin Ltd. or its subsidiaries

Garmin International, Inc.

1200 East 151st Street, Olathe, Kansas 66062, U.S.A.

Garmin (Europe) Ltd.

Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, SO51 9DL, U.K.

Garmin Corporation

No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan

www.garmin.com

Part Number 190-00476-00 Rev. C