




StreetPilot® c320



setup and go!

WARNING: See the product information sheet in the product box for product warnings and other important information.

Step 1: Configure Your c320

Press and hold the  **Power** button on the side of the unit to turn it on. Follow the on-screen instructions to set up your c320; you only have to do this once.

Step 2: Install Software and Load Maps

Before using your c320, install software on your computer using the DVD-ROM, and then load maps on your c320. Refer to the setup guide for complete instructions.

Step 3: Mount Your c320

To ensure a tight grip, clean and dry the windshield before mounting the suction cup.



1. Plug the small end of the cable into the mount and the other end in a 12-Volt receptacle in your vehicle.
2. Place the suction cup on the windshield.
3. Flip the lever back, toward the windshield.
4. Fit the bottom of your c320 into the cradle of the suction cup mount.
5. Tilt your c320 back until it snaps in place.

If necessary, use the tension knob to improve your viewing angle.


WARNING: This product contains a lithium-ion battery. To prevent damage and risk of fire due to high temperatures, remove the unit from the vehicle or store it out of direct sunlight, such as in the glove box. For more information, see www.garmin.com/safety.

Check your state and local traffic laws before mounting. Currently, state laws in California and Minnesota prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other Garmin dashboard or friction mounting options should be used.


Garmin® and StreetPilot® are registered trademarks of Garmin Ltd. or its subsidiaries and may not be used without the express permission of Garmin.

Step 4: Find Your Destination

1 Touch **Where to?**

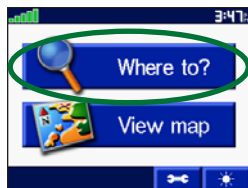

2 Select a category.

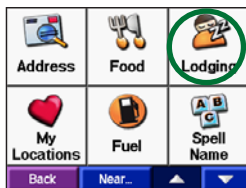 

3 Select a destination.



4 Touch **Go!**



5 Enjoy the route!



Tip: Touch  and  to see more choices.

Step 5: Follow Your Route

Follow the route to your destination using the Map page. As you travel, your c320 guides you to your destination with voice prompts, arrows on the map, and directions at the top of the Map page. If you depart from the original route, your c320 recalculates the route and provides new route instructions.



Your route is marked with a red line.




Follow the arrows as you take turns.



A checkered flag marks your destination.

You can add a stop to your route. The c320 gives you directions to the stop and then to your final destination.

1. With a route active, go to the Menu page, and touch  **Where to?**
2. Search for the extra stop.
3. Touch **Go!**
4. Touch **Yes** to add this stop before your destination. Or, touch **No** to make this your new final destination.

Note: You can add only one stop to your route.

Viewing the Map Page

From the Menu page, touch **View map** to open the Map page. The position icon ▲ shows your current location. Touch buttons on the Map page to see additional information.

Current Route page:

- 0.2⁺ Left on Ward Pky
- 2.1⁺ Keep left on Ward Pky
- 0.9⁺ Keep right on Ward Pky
- 300⁺ Keep left on Roanoke Pky

Map page: Touch the directions bar to open the Current Route page. Touch **Left** to zoom out. Touch **Right** to zoom in.

Trip Information page: Touch **Arrival** or **Speed** to open the Trip Information page.

Next Turn page: Touch **Turn In** to open the Next Turn page.

Menu page: Touch **Menu** to open the Menu page.

Trip Information page data:

W	30 ⁺	6.5 ⁺	
Overall Avg	8.2 ⁺	Max Speed	54.7 ⁺
Total Time	18:44	Stopped	15:17
Back	Reset Trip	Reset Max	

Menu page data:

Where to?	3:47		
View map			
Stop	Detour	Share	Refresh

Next Turn page data:

Left on Ward Pky	0.2 ⁺
00:26	
Back	Navigation

Saving Places You Find

- 1 After you have found a place you want to save, touch **Save**.

 


- 2 Touch **OK**. The place is saved in **My Locations > Favorites**.



Finding Saved Places


- 1 From the Menu page, touch **Where to?**

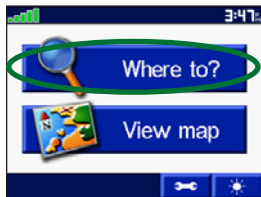

- 2 Touch **My Locations > Favorites**.




 - 3 Select a place.

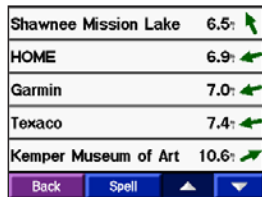


Saving Your Current Location

 1 Touch **Where to?**

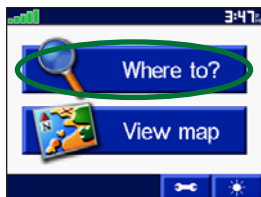

2 Touch **My Locations.**

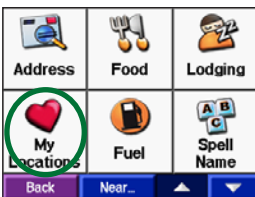 


3 Touch **Save > Yes.**




Setting a Home Location

 1 Touch **Where to? >**
My Locations.

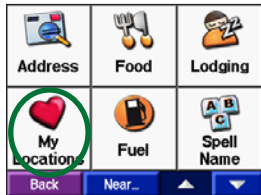

2 Touch **Set Home.**

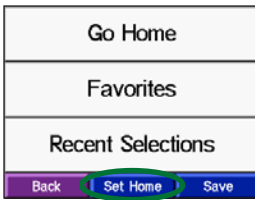 

3 Select an option.



Going Home

After you have set your Home location, you can route to it at any time by touching **My Locations** and then **Go Home**.




Changing Your Home Location

Change your Home location by repeating the steps you took to set it.

Adjusting the Volume

To adjust the volume, turn the Volume knob, located above the **Power** button.

Adjusting the Backlight Brightness

1. From the Menu page, touch .
2. Touch  to decrease the backlight brightness. Or, touch  to increase the brightness.
3. Touch **OK**.

Resetting Your c320

If your c320 stops responding, turn it off and back on. If this does not help, reset the c320.

1. Unplug the power and USB cables to remove external power.
2. Place your thumbnail in the groove located under the Garmin logo on the faceplate and gently pull off the faceplate.
3. Press the **Reset** button for about 3 seconds.
4. Connect the c320 to a power source using the power cable. The c320 should automatically turn back on and operate normally.

More Information

For more information about your c320, refer to the owner's manual located on the enclosed DVD-ROM and at www.garmin.com/products/sp320/. Click on the **Manuals** link and then select **Download**.

